

Thank you for purchasing the QuARTz ACO ShowerShelf!


Product Details

The **ShowerShelf** you have purchased comes in **2 lengths**:

- 15.75" (400mm)
- 23.62" (600mm)

And in **2 styles**:


- Square Pattern
- Wavy Pattern

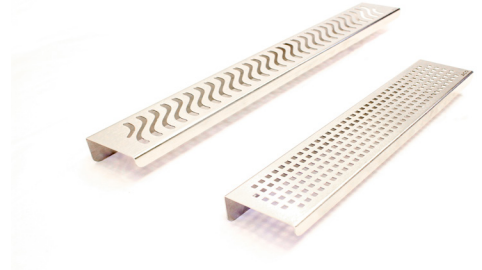

Please make sure the size and style are what you ordered prior to installation.

The packaging contains:

- (2) Stainless Steel Screws (1.5" long)
- (2) Plastic Spacers
- (2) Wall Anchors
- 1 ShowerShelf

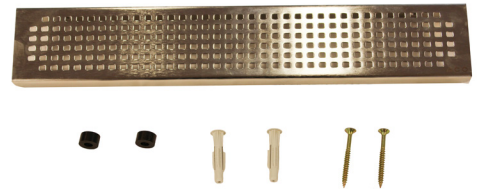

These installation instructions will follow a step-by-step procedure on how to mount the shelf to the shower. The screws included in this installation kit are designed to be used in ceramic tile, natural stone, cultured marble, man-made stone, and other solid surfaces. The screws are not intended to be used in fiberglass shower surrounds. For fiberglass shower surrounds, other anchor types may be substituted at the installer's discretion.

Determine the Location

Determine the desired location for the ShowerShelf by holding the shelf in different spots within the shower enclosure.

Be sure to install the shelf at a height and location that will not interfere with hand-held shower devices.

Hold the shelf with the long outer edge facing the intended location and the shelf shorter edge facing down.

Decide where the shelf will be installed for ease of use. The best location will allow easy access to the user during the showering process.

Once the location is determined, follow the installation instructions on the next page to complete installation.



Installation Procedure

- 1** Mark the holes for drilling. (It is recommended to use a level and mark the drilling location through the predrilled holes in the body of the shelf).
- 2** Drill two holes in the surface large enough to install wall anchors (drill and drill bit provided by others). The holes drilled in the solid surface should be a size that a tool is required to gently insert the anchors until flush with surface.
- 3** Install the wall anchors.
- 4** Using one of the Stainless Steel Screws (provided), push one of the plastic spacers on the screw and repeat using the second screw. Spacer goes between flange and wall.
- 5** Align the screws with the pre-drilled holes on the shelf, and insert screws towards the wall and spacer facing outward.
- 6** Using a Phillips head screwdriver, gently start the screw into the wall anchor, turning the screw five or six revolutions, or until it grabs hold. Repeat procedure with the other screw.
- 7** Tighten the screws until the shelf is firmly in place, there should NOT be ANY movement once the shelf is installed. The spacers provided eliminate direct contact between the shelf and the shower wall.
- 8** Congratulations! You have installed your ShowerShelf. Use ShowerShelf to hold shower products. Don't forget to show off your new ShowerShelf to your family and friends!

